
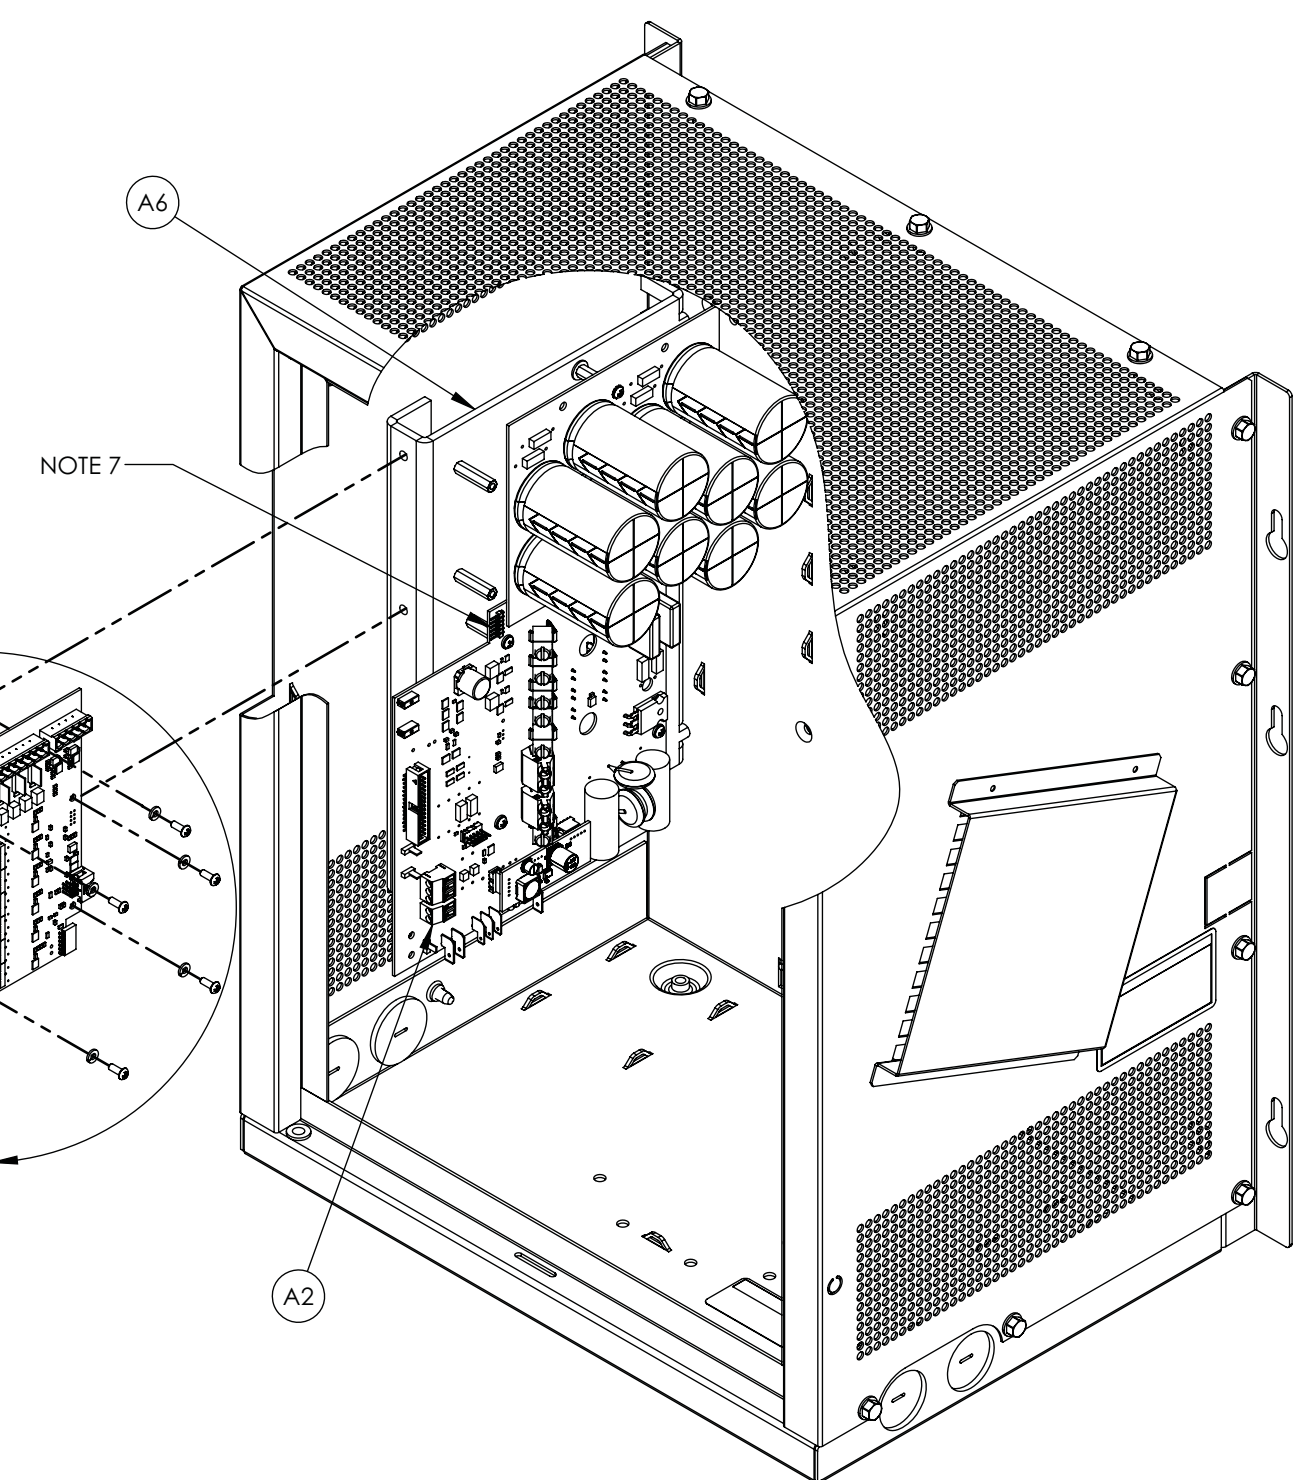
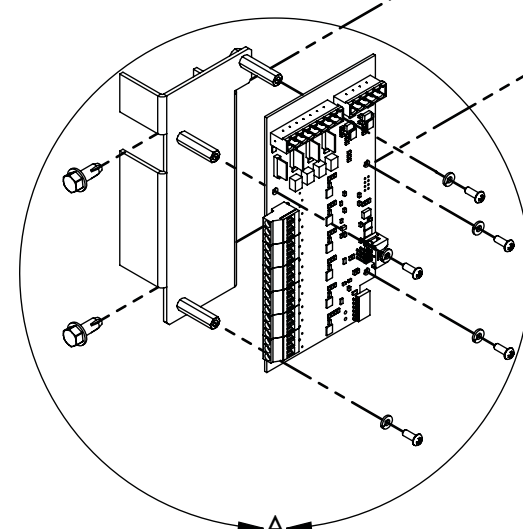


INSTALLATION KIT PART NUMBERS:

- EJ5301-01.
- EJ5301-02.

TOOLS NEEDED:

- PHILLIPS HEAD SCREW DRIVER
- 3/8" NUT DRIVER

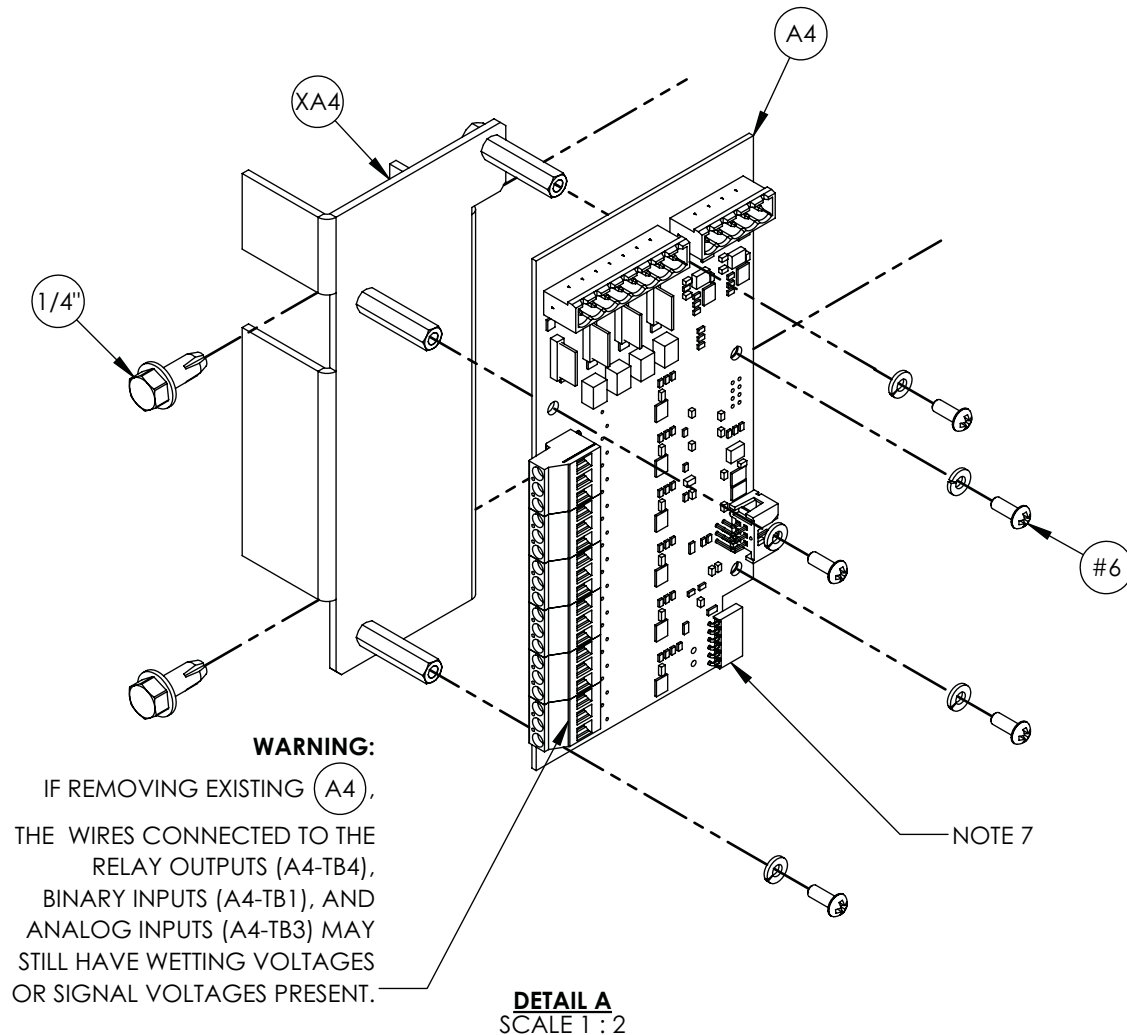

MOUNTING VIEW
 STYLE - 5054 SHOWN
 ALSO APPLICABLE TO STYLE - 5070

NEW INSTALLATION INSTRUCTIONS:

1. TURN OFF (OPEN) AC INPUT CIRCUIT BREAKER (CB1), AND DC OUTPUT CIRCUIT BREAKER (CB2).
2. ALLOW INTERNAL VOLTAGES TO DISSIPATE.
3. OPEN DOOR PANEL. CAREFULLY REMOVE PLEXIGLAS SHIELDS.
4. USING A VOLTMETER, VERIFY ALL POTENTIAL VOLTAGES ARE AT "0" ON LINE SIDE OF DC BREAKER.
5. LOCATE (A6) RECTIFIER ASSEMBLY AS SHOWN IN ATevo MOUNTING VIEWS.
6. USE PROVIDED (1/4") HARDWARE TO MOUNT (XA4) TO (A6) HEATSINK AT THE (XA4) MOUNTING HOLE POSITIONS.
7. ALIGN HEADER SOCKET AT BOTTOM RIGHT OF (A4) AUXILIARY I/O BOARD WITH HEADER PINS ON (A2) POWER BOARD.
8. PUSH (A4) AUX I/O BOARD ONTO HEADER PINS OF (A2) POWER BOARD AND ALIGN 5 MOUNTING HOLES WITH STANDOFFS ON (XA4) & (A6) .
9. INSTALL 5 (#6) MOUNTING HARDWARE THROUGH BOARD AND INTO STANDOFFS.
10. INSTALL USER ALARM WIRING TO TB4 AS NEEDED.
11. REPLACE SAFETY SHIELD, CLOSE FRONT PANEL DOOR, AND RESTART ATevo.

REV.	DRN BY	CHK BY	APP BY	DATE	DRN BY	DATE:	TITLE ATevo Field Installation Instructions INSTR,AUX.I/O.PCB,EV1,6-25A
				5/25/2023	MS	5/25/2023	
DESCRIPTION					CHK BY	DATE:	
Initial Release					KJB	5/25/2023	
					APP BY	DATE:	
					JK	7/6/2023	
				UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS FOLLOW THE ANSI SYSTEM IPS (INCHES-POUNDS & SECONDS) TOLERANCES ARE: FRAC. ±1/64, DEC. ±0.015, ANG ±.25°			
							SCALE 1:4
				DWG No JD5025-51			REV 0
				SHEET 1 OF 1			