

8

7

6

5

4



3

2


1

INSTRUCTIONS:

1. REMOVE HARDWARE FROM FOUR (4) CORNERS OF STYLE-5070 TOP.
2. PLACE SUPPLIED RIGHT ANGLE CLIPS ON TO TOP PANEL AS SHOWN (SLOT SIDE DOWN).
3. SECURE CLIPS WITH RECENTLY REMOVED HARDWARE, BUT DO NOT TIGHTEN.
4. ADJUST CLIPS TO BE FLUSH WITH ENCLOSURE SIDES.
5. PLACE DRIP SHIELD AND SECURE TO RIGHT ANGLE CLIPS USING SUPPLIED SELF TAPPING SCREW THROUGH EXTRUDED HOLES.
6. ADJUST DRIP SHIELD IF NEEDED, AND FULLY SECURE FOUR (4) TOP SCREWS.

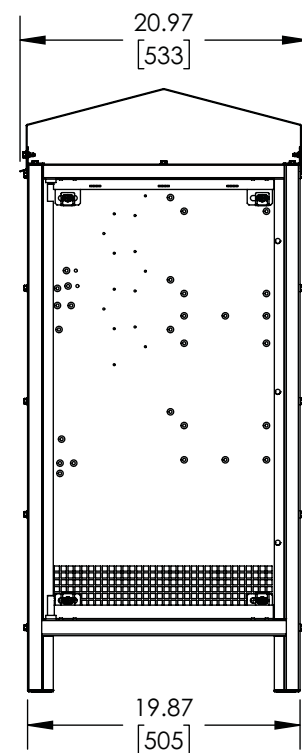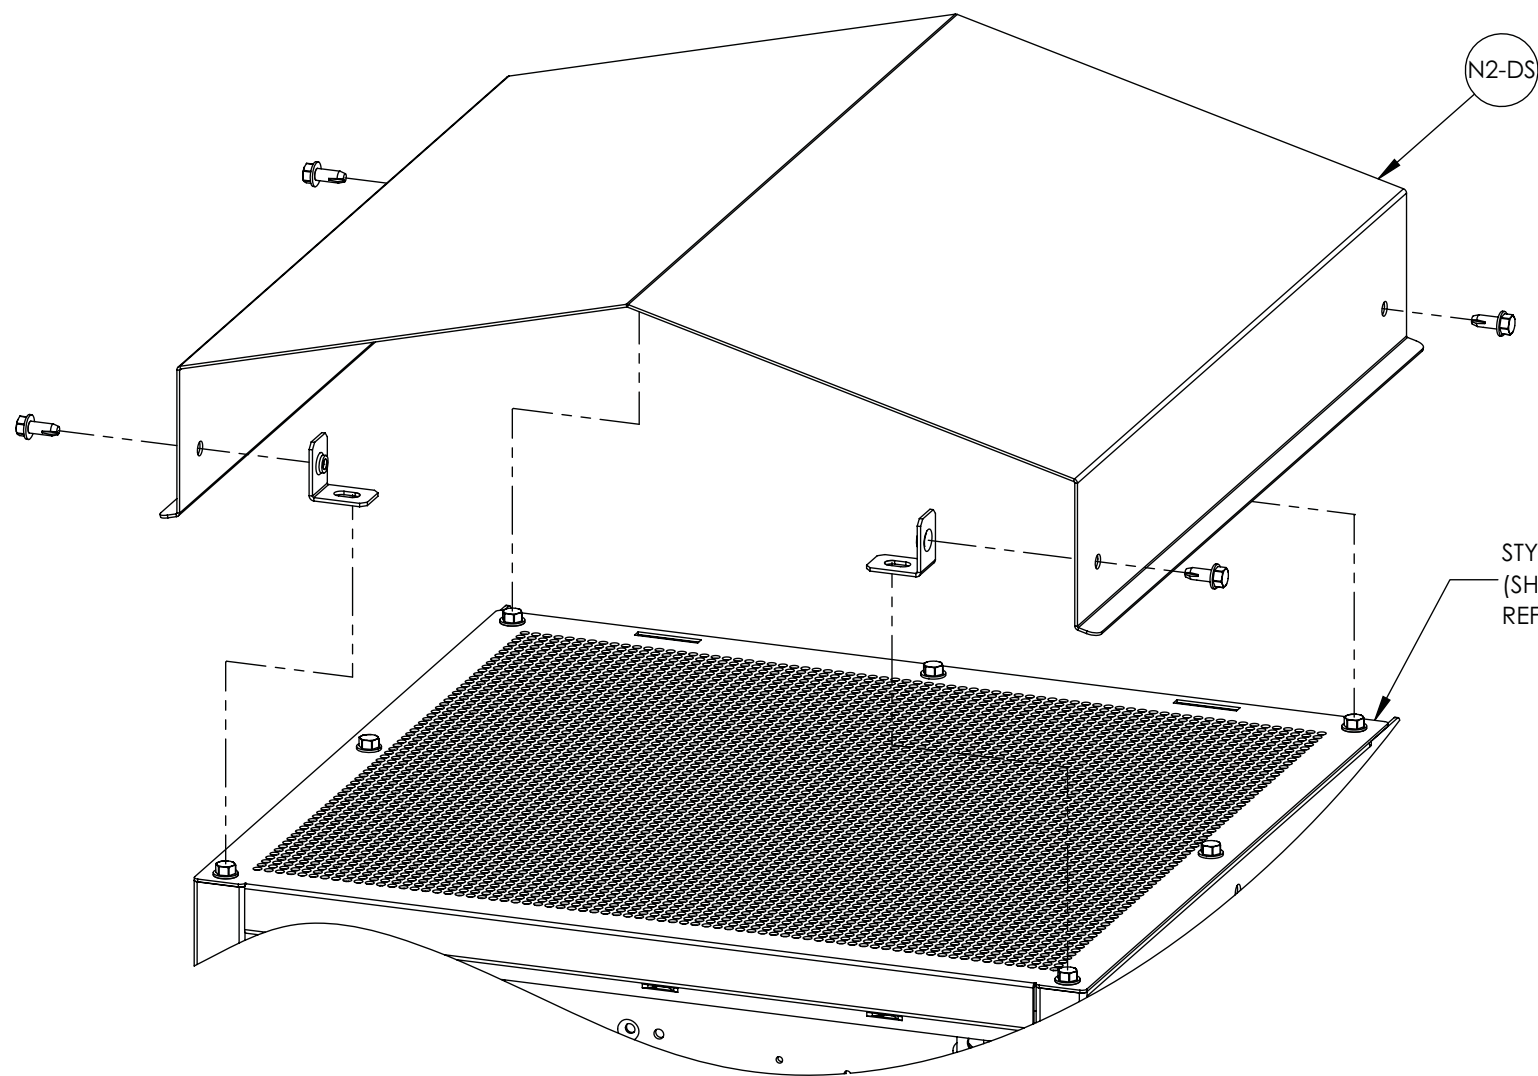

FRONT VIEW
SCALE 1 : 14

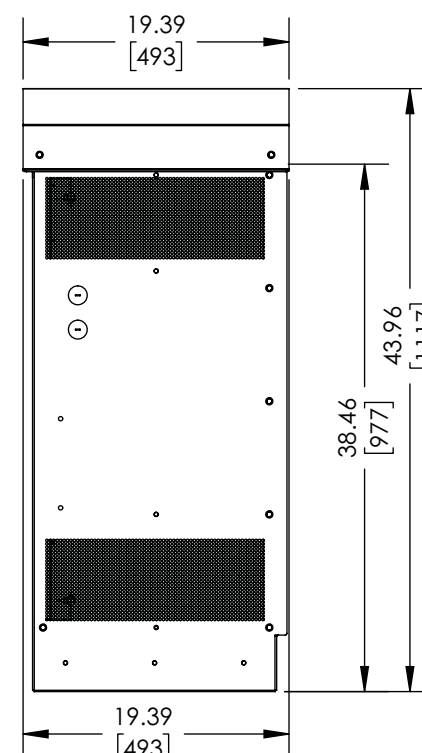

RIGHT VIEW
SCALE 1 : 14

FINAL INSTALLATION FOOTPRINT

REV. 0	DRN BY	CHK BY	APP BY	DATE 11/30/2021	DRN BY <i>MB</i>	DATE: 11/30/2021	TITLE ATEVO USER INSTALLATION INSTRUCTIONS NEMA TYPE-2 DRIP SHIELD ACSY: EI0191-52
DESCRIPTION Initial Release				CHK BY <i>MCR</i>	DATE: 11/30/2021	UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS FOLLOW THE ANSI SYSTEM IPS (INCHES-POUNDS & SECONDS) TOLERANCES ARE: FRAC. ±1/64, DEC. ±0.015, ANG ±.25°	
				APP BY <i>MCR</i>	DATE: 11/30/2021		
						B SCALE 1:4 DWG No JA0092-52 REV 0 SHEET 1 OF 1	